


Front Panel Installation


1

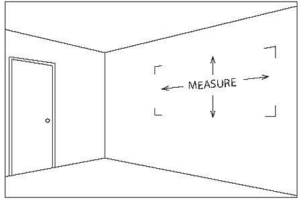

Using a measuring tape, measure the length and width of your wall to determine your desired number of baseboards.

Baseboard dimension (Width X Height):
11.81" X 11.81" (300mm X 300mm)


2

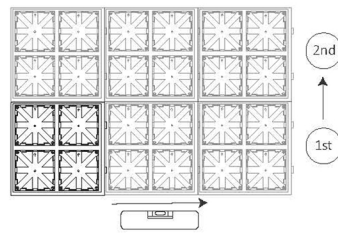

Mount the first baseboard at the bottom left corner, and work your way rightward. After you finish the 1st row, proceed to the 2nd row upward.


Align baseboards at level on wall.

3

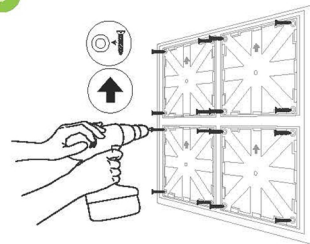


Make sure the arrows are pointing upward when mounting baseboards. Use a screwdriver or power tool to screw in. There are 16 screw points on each baseboard. They are located on the corners of each inner-square bracket.


4

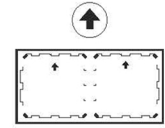


Make sure arrows are pointing upward when putting on front panels

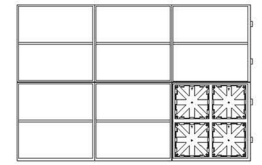

5

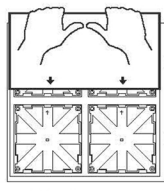


Align the top of the front panel to baseboard, and pull down.

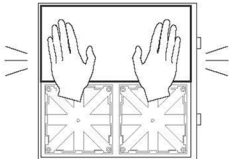

Push the lower portion of the front panel into the baseboard.



6

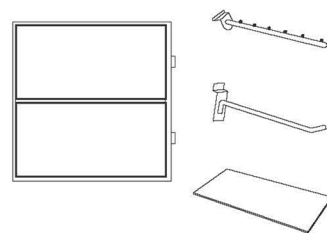

Add your desired accessories to your Qlevo wall!

Front Panel Removal


1

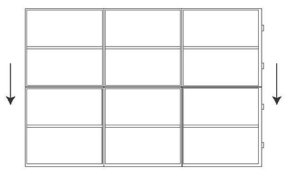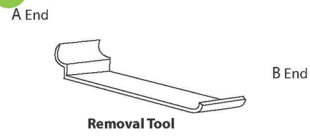

Be sure to start from top to bottom, When removing front panels

2


CORRECT

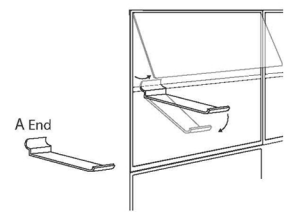

To remove the upper front panels, insert A end of the removal tool to the lower portion of the front plate. Use the lower front panel as leverage, then pull downwards.


3

CORRECT

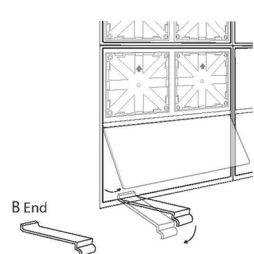

To remove the bottom front panels, insert B end of the removal tool to the lower portion of the front plate and push inwards.

WRONG!

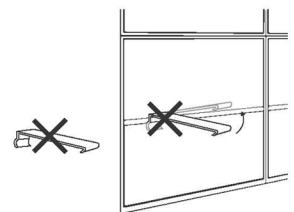

WARNING: Do not have removal upside-down when removing front panels. Improper usage will result in damage.